

# Zooming In and Out the Work Area

To zoom in and out in the simulation work area:

1. Put your mouse pointer over the tree.
2. Scroll the mouse wheel to change the scale.  
or  
Use the **Plus** and **Minus** buttons in the bottom right corner of the work area to adjust the scale.

